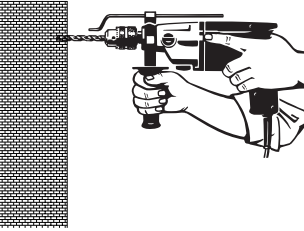

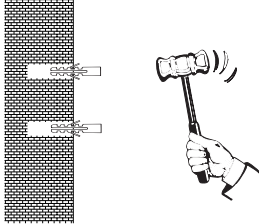




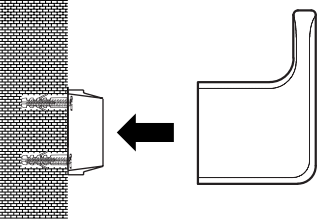

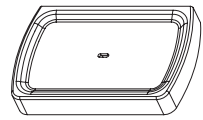
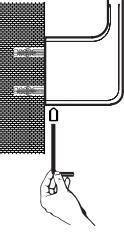


# INSTALLATION / MAINTENANCE INSTRUCTIONS

## SANDALWOOD ACCESSORIES

STEP 1	 <p>Using the holes in the mounting plate measure and mark on the wall the position required for installation. Arrange mounting plate horizontally or vertically depending on product, drill holes where marked.</p>	 <p><b>SINGLE TOWEL RAIL 800MM</b></p>
STEP 2	 <p>For solid walls insert wall plugs, for other walls please use approved fixing methods.</p>	 <p><b>DOUBLE TOWEL RAIL 800MM</b></p>
STEP 3	 <p>Fix mounting plate into position using screws provided.</p>	 <p><b>SINGLE TOWEL RAIL 600MM</b></p>  <p><b>ROBE HOOK</b></p>
STEP 4	 <p>Position body over mounting plate as shown.</p>	 <p><b>TOILET ROLL HOLDER</b></p>  <p><b>SOAP DISH</b></p>
STEP 5	 <p>Use screws provided to secure the body to the mounting plate.</p>	